

A graphic consisting of two thick, black, curved lines that sweep upwards and to the right, positioned above the brand name.

Hills®

Hills Clothes Airing 2-Tier and 3-Tier

Product Manual



Congratulations

Congratulations on the purchase of your new **Clothes Airer** which will bring you many years of trouble free and efficient drying.

Thank you for choosing Hills.

Warning

- Do not allow children or pets to swing on your Clothes Airer or items of clothing.
- Designed for use as a clothes airer only. Do not use for any other purpose other than to hang and dry washing.
- Not to be used as a child's toy.
- Keep hands clear of pivot joints when opening and closing.
- Ensure when opening and closing your Clothes Airer that your hands are positioned where they will provide support and will not be caught in moving parts.
- Inspect regularly – do not use if damaged.
- Dispose of packaging thoughtfully.

Carton contents

Part name	2-Tier Airer Qty.	3-Tier Airer Qty.
Fixed Frame	2	2
Pivoting Frame	2	2
Hanging Shelves	4	6
Pivot	2	2
Clothes Hanger Hook	2	2
Non-Locking Castor	2	2
Locking Castor	2	2
Screw	4	4

Not included: Phillips Head Screw Driver

Please retain this Product Manual. Record the following information for future reference.

Product Number _____

Date of purchase: _____



Name and location of store: _____




Designed and tested under a Quality System that meets Hills demanding quality specifications.

Made in China

Fig. 1

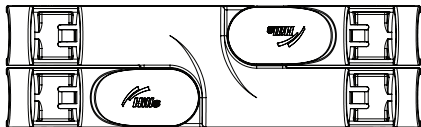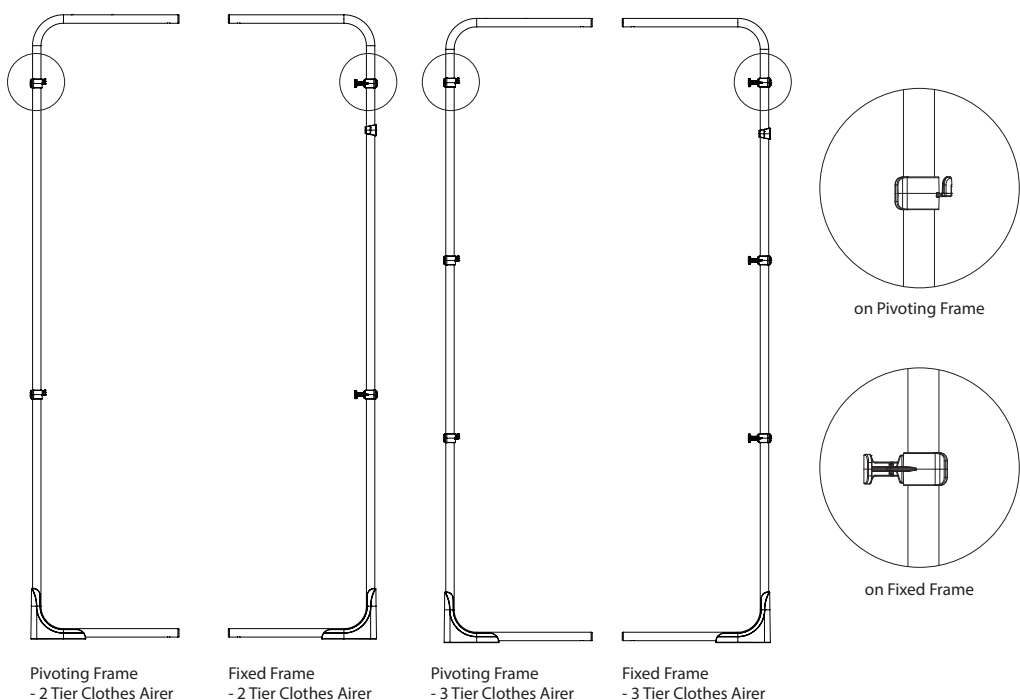


Pivot

 


Clothes Hanger Hook




Screw

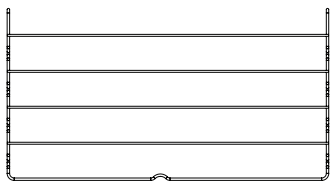

Shelf

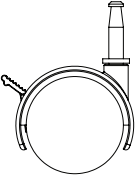

Locking Castor

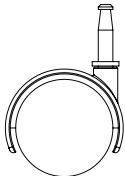


Non Locking Castor

Step 1 – Assembling the Fixed Frame

- 1.1 Push one of the Fixed Frames into the fixed part of the central Pivot until it locks into position. (Fig. 2).
- 1.2 Repeat again with the second Pivot at the base of the frame.


Fig. 2

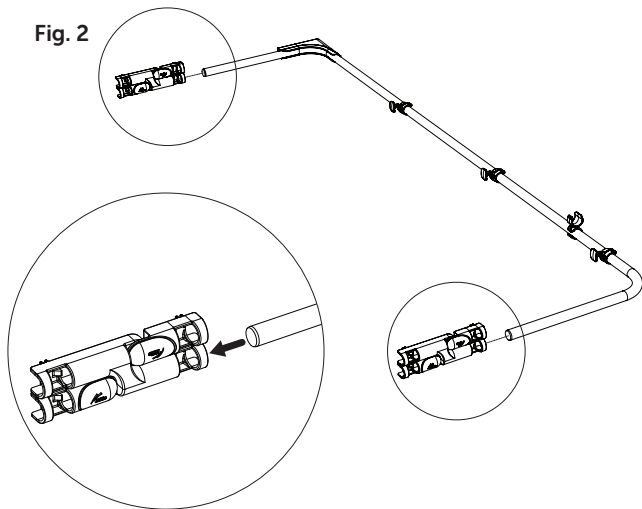


Step 2 – Assembling the Pivoting Frame

- 2.1 Fix one of the Clothes Hanger Hooks to one of the Pivoting Frames as shown using two of the small screws. (Fig. 3). Repeat for the second Pivoting Frame.

Fig. 3

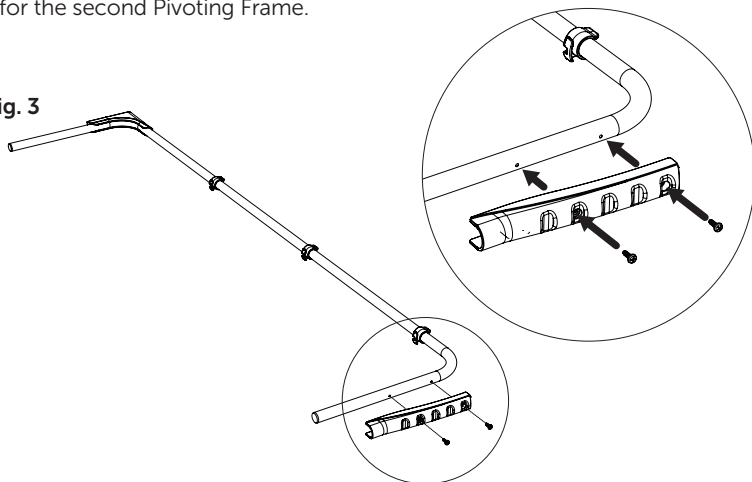


- 2.2** Push one of the Pivoting Frames into the pivoting part of the central Pivot, until it locks into position. (**Fig. 4**). Repeat again at the base of the frame with the second Pivot.

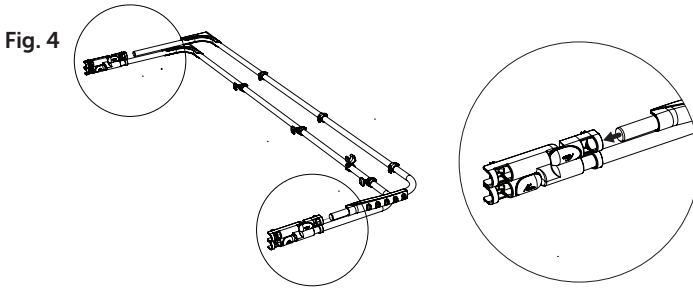


- 2.3** Push the Pivoting Frame into the Locking Clip on the Fixed Frame to stop it from rotating outward. (**Fig. 5**).

Note: Repeat these steps on the other side of the Pivot with the remaining frames.

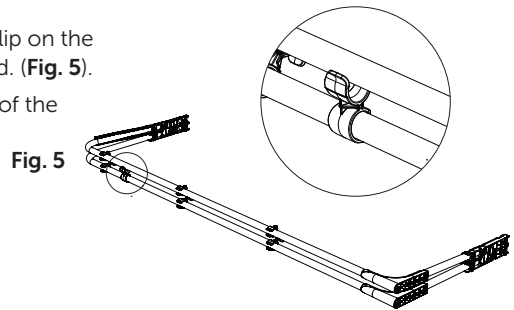


Step 3 – Assembling the Wheels

- 3.1** Push a locking castor into each of the Pivoting Frame's feet. To do this, insert the metal pin of the castor into the hole in the base of the foot and apply force until the castor clicks into position and cannot be removed. (**Fig. 6**).

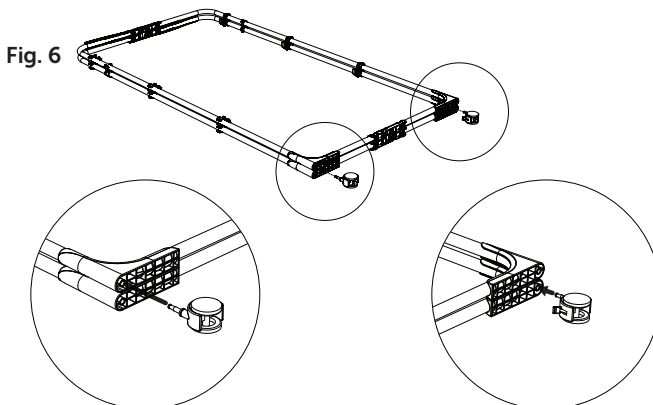


- 3.2 Repeat on the Fixed Frames using the non-locking castors. (**Fig. 7**).

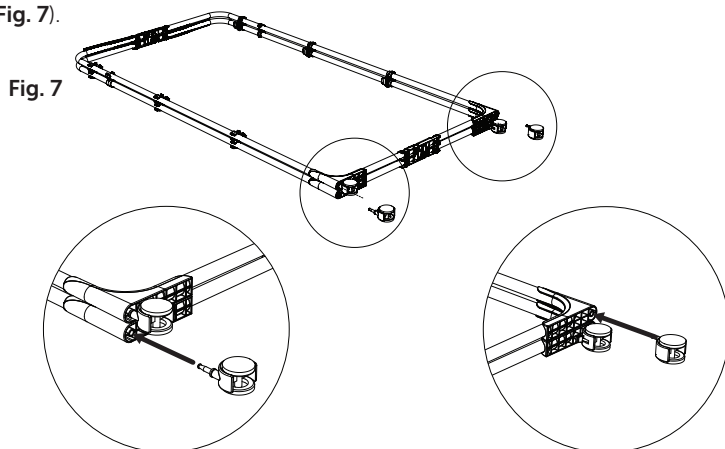


Step 4 – Assembling the Shelves

- 4.1 Bring the product to the upright position.
- 4.2 Disengage one of the Pivoting Frames from the Locking Clip and rotate outward 90 degrees to keep it steady. (**Fig. 8**).


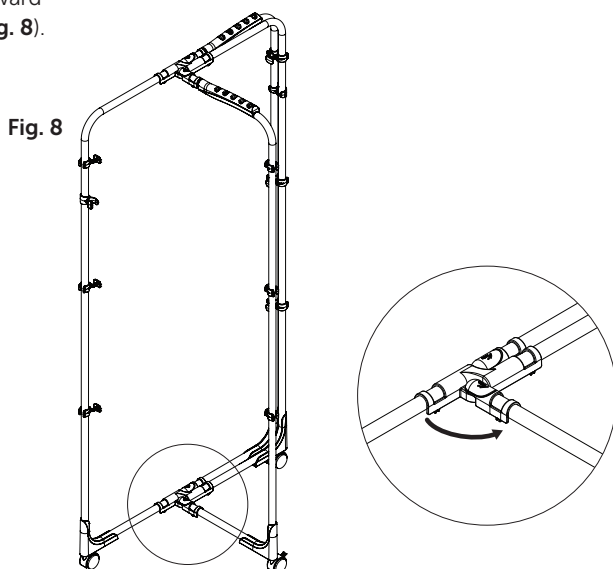


- 4.3** Place one of the shelves in between the two Fixed Frames at a 45 degree angle. (**Fig. 9**).

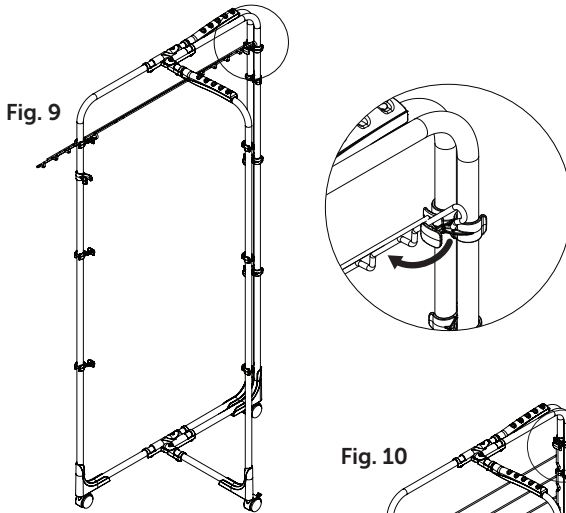


- 4.4** Slide the looped end of the shelf over the pivots and rotate the shelf until it is parallel with the frames. (**Fig. 10**).

- 4.5** Repeat on the opposite side of the frame and for each remaining shelf. (**Fig. 11**).

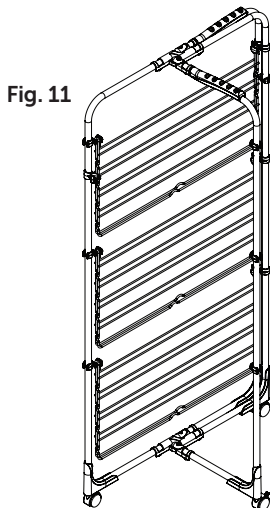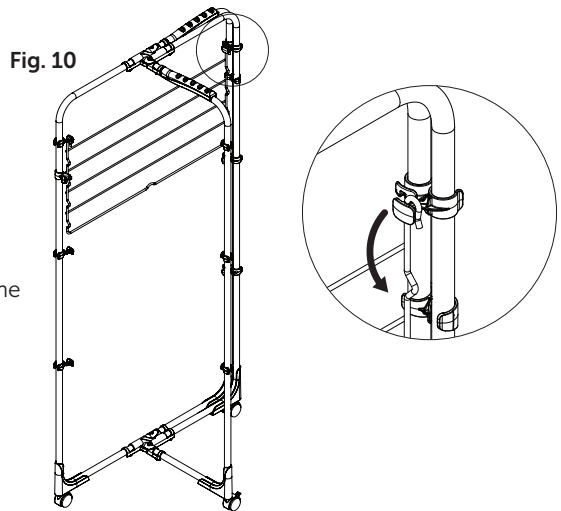



Step 5 – Operating the Clothes Airer

- 5.1 Rotate both of the Pivoting Frames outward and lock the wheels by pulling the lever in the up position. (Fig. 12).

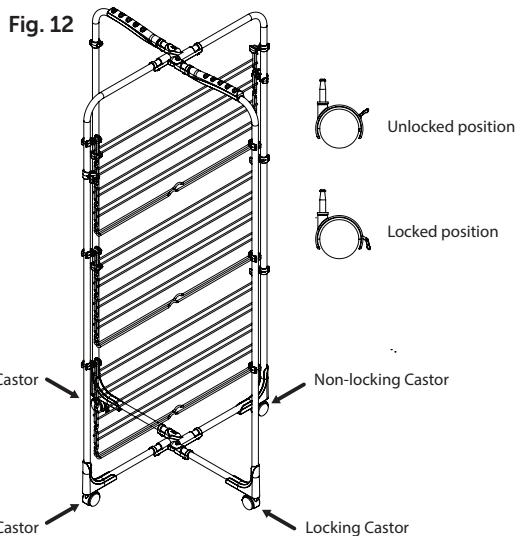


- 5.2 Rotate one of the shelves upward and clip it into the corresponding clip on the Pivot Frame. (Fig. 13).

- 5.3 Repeat for each of the other shelves. (Fig. 14).

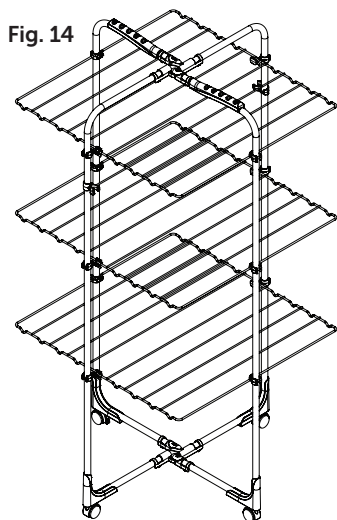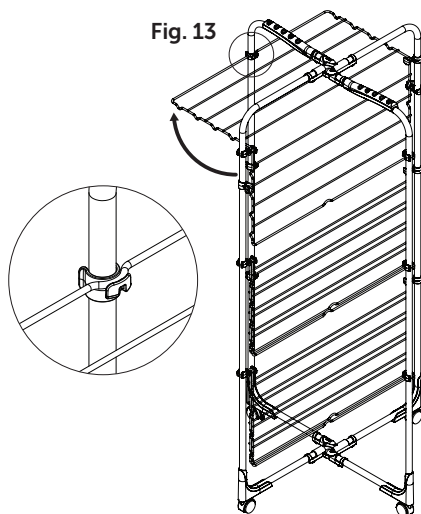

Step 6 – Using the Clothes Hanger Hooks

- 6.1 Unclip the top shelf and fold down 90 degrees. If you have purchased a Hills 3-Tier Clothes Airer you may need to fold down a second shelf on one side.
- 6.2 Hang the clothes hanger in the indented part of the hanger hook at the top of the Pivoting Frame. (Fig. 15).

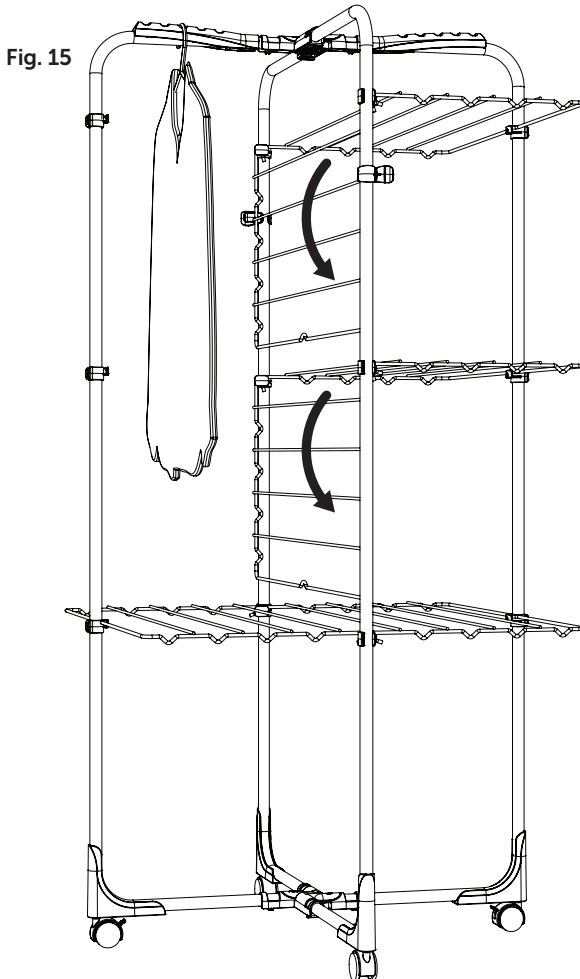

Note: If unclipping the lowest shelf, ensure to have the other side engaged or to lock the castor on the pivoting frame.

Lock all the locking castors to reduce the risk of the product moving when loaded.

Step 7 – Folding the Clothes Airer against a wall

- 7.1** To stand the Clothes Airer against a wall, unclip all the shelves on one side of the frame and rotate down 90 degrees.
- 7.2** Secure the Pivoting Frame into the locking clip. (**Fig. 16**).


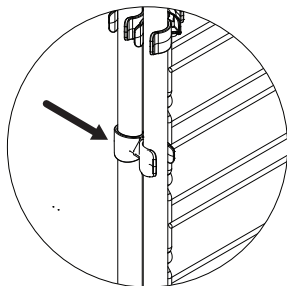


Fig. 16

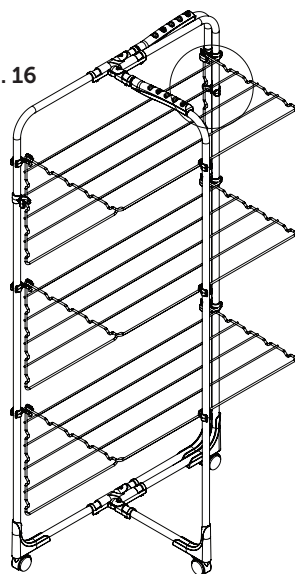


Step 8 – Storing the Clothes Airer

- 8.1** To fold the Clothes Airer completely for storage, unclip and fold down the shelves on both sides and clip the Pivoting Frames into the Locking Clips on both sides of the product. (**Fig. 17**).

Note: Lay the product flat if required.

Fig. 17

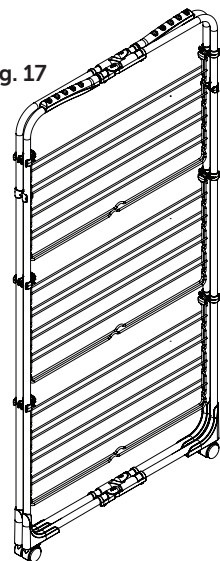

3-Year Warranty*

*In addition to other rights and remedies that may be available under any applicable law, Cyclone Tools Pty Ltd warrants to the purchaser of the product (customer) that this product will be free from defects in workmanship and materials for 3 years from the date of purchase of the product. If a defect in material or workmanship becomes evident during that period, Cyclone Tools Pty Ltd will, at its option, either:

- replace the product; or
- refund to the customer the purchase price paid by the customer for the product.

In the event of such a defect, the product should be returned to the place of purchase of the product by the customer, together with proof of purchase, for replacement or refund. Any handling and transportation (and other expenses incurred in claiming under this warranty) are not covered by this warranty and will be borne by the customer, not Cyclone Tools Pty Ltd.

The obligation of Cyclone Tools Pty Ltd under this warranty is limited to the circumstances set out above and is subject to:

- the product not having been altered, tampered with or otherwise dealt with by any person in a manner other than as intended in respect of the relevant product; and
- the product not having been used or applied in a manner that is contrary to customary usage or application of the relevant product or contrary to any stated instructions or specification of Cyclone Tools Pty Ltd (or its related bodies corporate).

For products purchased in Australia:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or

damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For products purchased in New Zealand:

Our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act. Cyclone Tools Pty Ltd will comply with our obligations to you under the Consumer Guarantees Act.

Cyclone Tools Pty Ltd

ABN 89 169 427 061

Level 1, 660 Doncaster Road,

Doncaster Vic 3108

Phone: 1300 300 564

Email: hhl.enquiries@amesau.com

Hills Contacts

We are committed to providing you with complete customer satisfaction. If you have any questions or comments about our products or services please contact your nearest Customer Service Centre during their local business hours:

Australia

1300 300 564

New Zealand

0800 021 027

Email

hhl.enquiries@amesau.com

Hills Websites

hillshome.com.au

Hills Home Living

hillshome.com.au/need-help/

Hills Consumer Advice

Cyclone Tools Pty Ltd
A.B.N. 89 169 427 061
Issue May 2017
HE1027b

